

V30

V30 111 616.479 PN16 DN15-200
Globe valve flanged



Size : DN 15 to DN 200
Ends : Flanges R.F. PN16
Min Temperature : -10°C
Max Temperature : + 300°C
Max Pressure : 16 Bars
Specifications : Rising rotating stem and handwheel
Bolted bonnet and gland packing
High temperature

Materials : Cast iron

V30

V30 111 616.479 PN16 DN15-200 Globe valve flanged

SPECIFICATIONS :

- Respect the flow direction (indicated by the arrow)
- Rising rotating stem and handwheel
- Bolted bonnet and gland packing
- Flanges R.F. PN16
- Grey painting RAL 7011-7012


USE :

- For all common fluids
- Min and max Temperature Ts : - 10°C to + 300°C
- Max Pressure Ps : 16 bars (see graph)
- Keep greased the stem
- Do not use for convector fluid
- Tighten the gland packing in service
- **Steam : 10 bars maximum**

FLOW COEFFICIENT Kvs (M3 / h) :

DN	15	20	25	32	40	50	65	80	100	125	150	200
Kvs (m3/h)	5.9	7.4	13	18	30	41	79	115	181	225	364	690



PRESSURE / TEMPERATURE GRAPH :

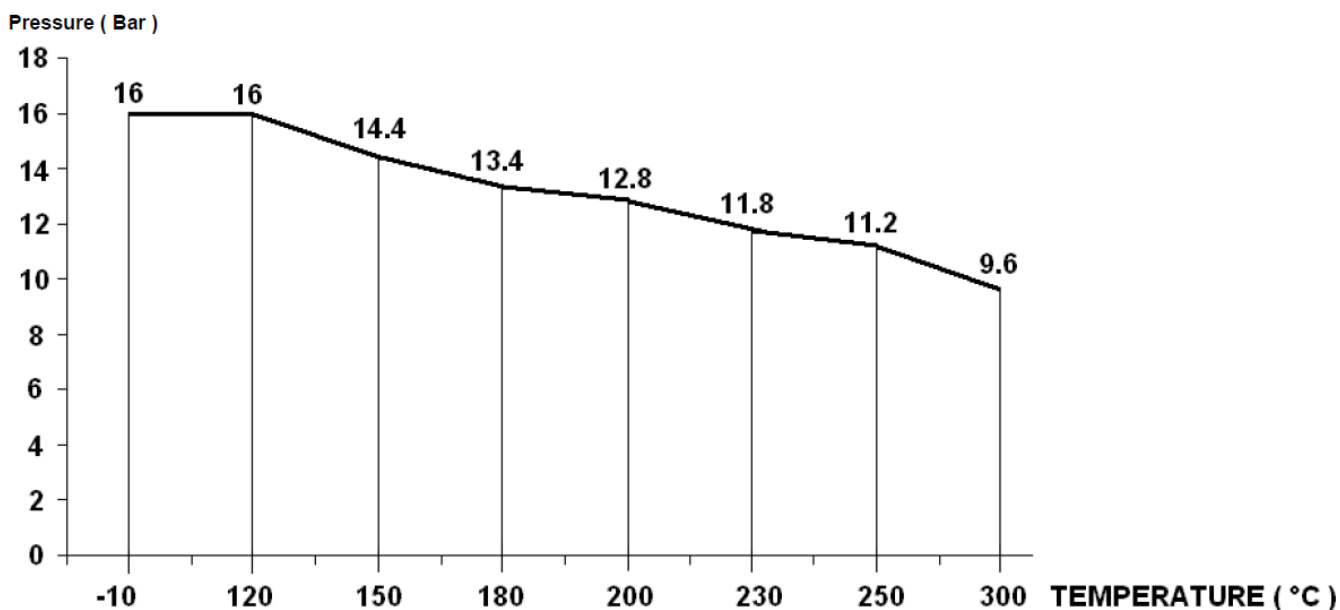


RANGE :

- Cast iron flanges R.F. PN16 Ref. 479 DN 15 to DN 200


MATERIALS:

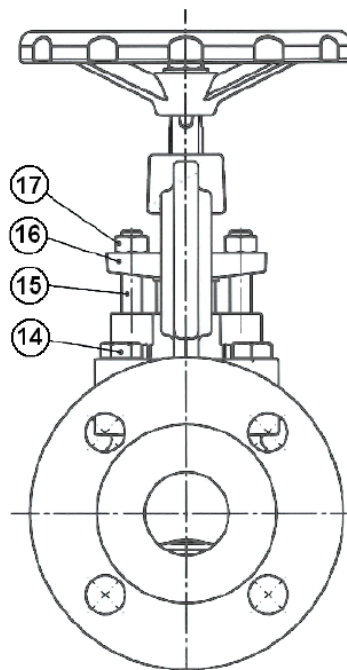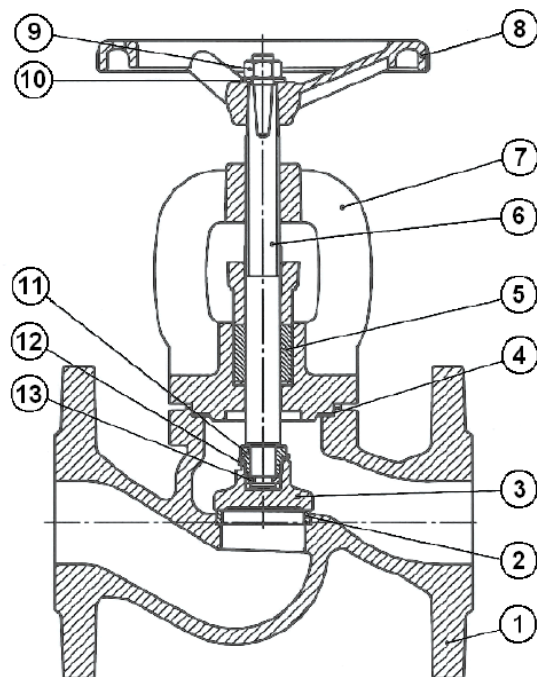

DN 15 - 50

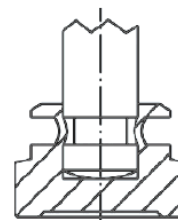

DN 65 - 150

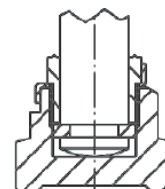


Item	Designation	Materials
1	Body	Cast iron EN GJL-250
2	Seat	SS 410 (1.4006)
3	Disc	SS 420 (1.4021)
4	Bonnet gasket	Graphite + NiCr
5	Gland packing	Graphite
6	Stem	SS 420 (1.4021)
7	Bonnet	Cast iron EN GJL-250
8	Handwheel	Cast iron EN GJS-500-7
9	Handwheel nut	Galvanized steel
10	Washer	Galvanized steel
11*	Disc screw	SS 420 (1.4021)
12*	Disc washer	SS 321 (1.4541)
13*	Ring	SS 420 (1.4021)
14	Hexagon bolt	8.8
15	T bolt	Galvanized steel 5.8
16	Gland	Cast iron EN GJL-250
17	Gland nut	Galvanized steel

* : only for DN 65 to 200

V30

V30 111 616.479 PN16 DN15-200 Globe valve flanged

SIZE (in mm) :

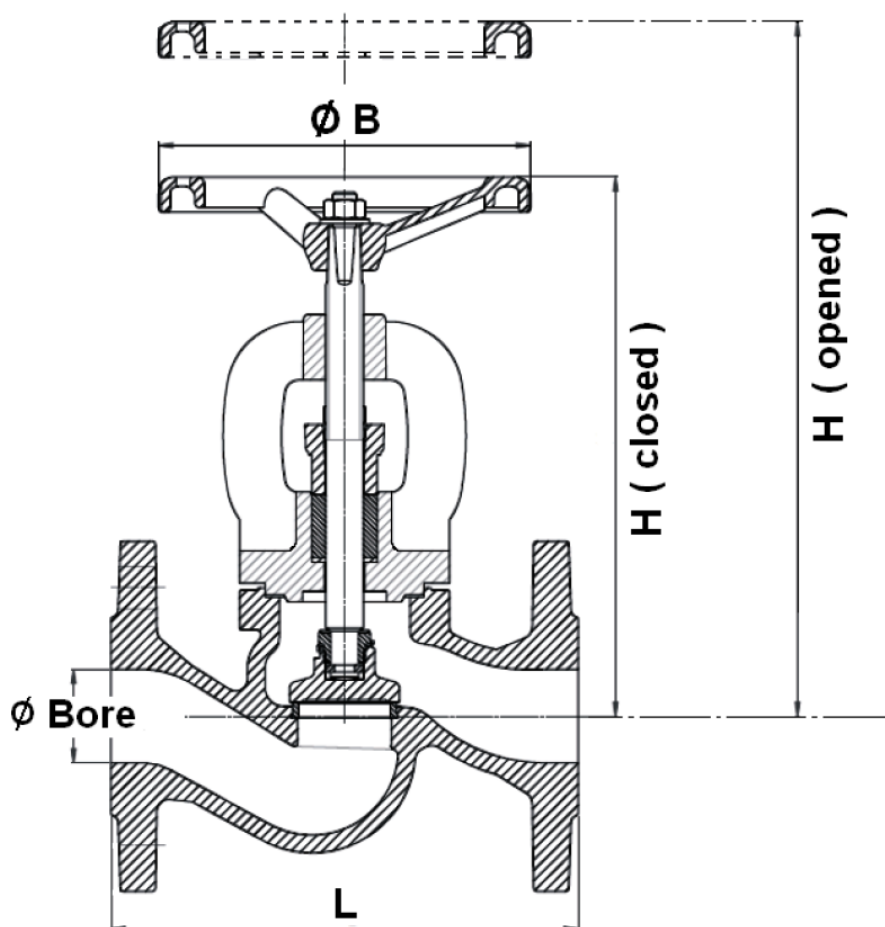


Ref.	DN	15	20	25	32	40	50	65	80	100	125	150	200
479	Ø Bore	15	20	25	32	40	50	65	80	100	125	150	200
	L	130	150	160	180	200	230	290	310	350	400	480	600
	H (opened)	193	194	203	212	263	273	305	344	378	420	483	606
	H (closed)	178	180	188	191	235	238	270	297	344	375	429	525
	Ø B	100	100	120	120	160	160	180	200	250	250	320	360
	Weight (Kg)	3.3	3.9	5	6.6	9.5	12	17.3	22.7	35.8	52.8	72.5	126

V30

V30 111 616.479 PN16 DN15-200 Globe valve flanged

FLANGES SIZE (in mm) :

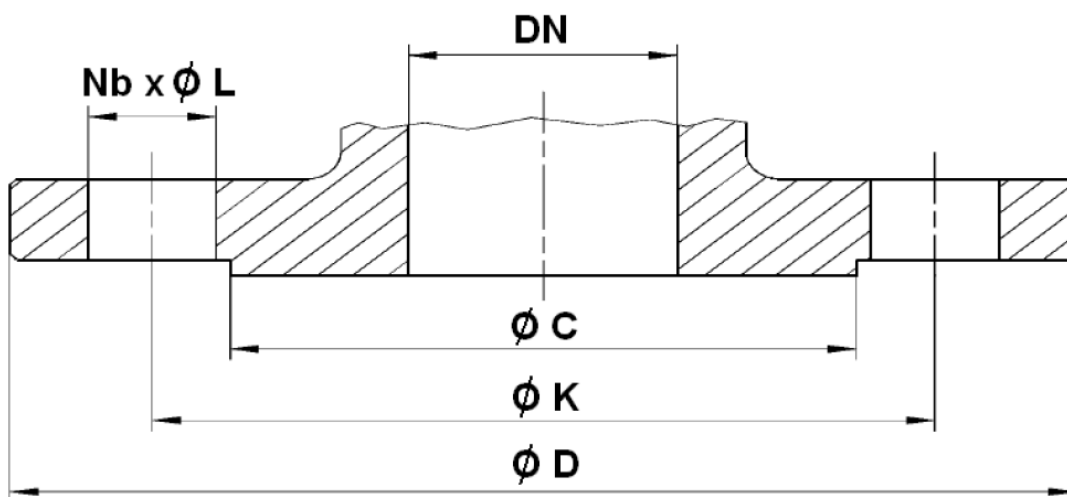

Ref.	DN	15	20	25	32	40	50	65	80	100	125	150	200
479	Ø C	46	56	65	76	84	99	118	132	156	184	211	266
	Ø D	95	105	115	140	150	165	185	200	220	250	285	340
	Ø K	65	75	85	100	110	125	145	160	180	210	240	295
	Nb x Ø L	4 x 14	4 x 14	4 x 14	4 x 19	4 x 19	4 x 19	4 x 19	8 x 19	8 x 19	8 x 19	8 x 23	12 x 23

V30

V30 111 616.479 PN16 DN15-200
Globe valve flanged

STANDARDS :

- Fabrication according to ISO 9001 :2008
- DIRECTIVE 97/23/CE : CE N° 0062
Risk Category III module H
- Tests according to EN 12266-1, range A
- Length according to EN 558 series 1 (DIN 3202 F1)
- Flanges R.F. according to EN 1092-2 PN16
- Approval certificate Polish **PZH**

INSTALLATION INSTRUCTIONS

GENERAL GUIDELINES :

- Ensure that the valves to be used are appropriate for the conditions of the installation (type of fluid, pressure and temperature).
- Be sure to have enough valves to be able to isolate the sections of piping as well as the appropriate equipment for maintenance and repair.
- Ensure that the valves to be installed are of correct strength to be able to support the capacity of their usage.
- **Installation of all circuits should ensure that their function can be automatically tested on a regular basis (at least two times a year).**

INSTALLATION INSTRUCTIONS :

- **Before installing the valves, clean and remove any objects from the pipes** (in particular bits of sealing and metal) which could obstruct and block the valves.
- **Ensure that both connecting pipes either side of the valve (upstream and downstream) are aligned (if they're not, the valves may not work correctly).**
- **Make sure that the two sections of the pipe (upstream and downstream) match, the valve unit will not absorb any gaps. Any distortions in the pipes may affect the tightness of the connection, the working of the valve and can even cause a rupture. To be sure, place the kit in position to ensure the assembling will work.**
- **If sections of piping do not have their final support in place, they should be temporarily fixed. This is to avoid unnecessary strain on the valve.**
- Tighten the bolts in cross.
- It's recommended to operate the valve (open and close) 1 to 2 times per year
- Tighten the gland packing at the first start of the installation (with a moderate torque) so that there's no leakage and the handwheel is easy to operate.
- Do not use tools to operate the handwheel